


# PHF TB1008X0.5

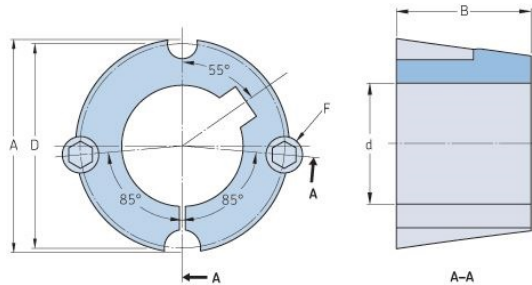

Bushing no.	<b>TB1008</b>
d = Bore diameter (mm)	<b>13</b>
Bore diameter (in)	<b>0.51</b>
Keyway width (mm)	<b>3.2</b>
Keyway width (in)	<b>0.13</b>
Keyway depth (mm)	<b>1.6</b>
Keyway depth (in)	<b>0.06</b>
A (mm)	<b>35.2</b>
A (in)	<b>1.39</b>
B (mm)	<b>22.2</b>
B (in)	<b>0.87</b>
D (mm)	<b>33.7</b>
D (in)	<b>1.33</b>
E (mm)	-
E (in)	-
F (mm)	<b>6.350 x 12.700</b>
F (in)	-
Weight (kg)	<b>0.11</b>
Weight (lbs)	<b>0.24</b>